

IMPORTANT SAFETY INSTRUCTIONS FOR THE AWESOME NAKOSITE EPILATOR

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for an epilator that has fallen into water. Unplug immediately.
2. Do not use epilator while bathing or in a shower.
3. Do not place or store an epilator where it can fall or be pulled into a tub or sink. Do not place in or drop an epilator into water or other liquid.
4. Always unplug this epilator from the electrical outlet immediately after use.
5. Unplug and remove power supply cord from epilator before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. This appliance should never be used by, on, or near children or invalids. Keep out of reach of children.
2. Use this epilator for its intended use as described in this manual.
Do not use attachments not recommended by the manufacturer.
3. Never operate this epilator if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water.
4. Keep the epilator, cord, plug and any attachments away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not operate or plug in epilator outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
7. Always check rotating discs, hair lift and massage element before using the epilator. Do not use the epilator if rotating discs, hair lift and massage elements are damaged, as injury may occur.
8. Always attach plug to epilator first, then to outlet. To disconnect, turn on/off switch to "Off" position, then remove plug from outlet.
9. To prevent possible damage to the cord, do not wrap cord around the epilator.
Do not use an extension cord.
10. Never put epilator in direct sunlight or store at a temperature above 140°F/60°C.
11. An appliance should never be left unattended while plugged in.
12. This epilator is for use on human hair on such areas: underarms, parts of the face, bikini area and legs only. Do not use this epilator for any other purpose.
13. Always store your epilator and power plug in a moisture-free area.
Make sure the cord is disconnected from the epilator.
14. When using the epilating head, keep it away from the hair on your head, eyelashes, eyebrows, clothing, brushes, wires, threads and cords to prevent accidents, injury or damage.
15. Keep the epilating head away from water. Do not use epilator near or over a sink or bathtub filled with water.
16. Only use the power plug supplied with the epilator.

SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

IMPORTANT

The following information and precautions are important when epilating:

CAUTION: Methods of removing hair by the root can cause in-grown hairs and minor skin injuries. Please consult your doctor if you have any questions about the use of an epilator.

Do not use the epilator if you suffer from varicose veins, rashes, spots or blemishes, or when the skin is irritated or if you have in-grown hairs or a tendency to produce in-grown hairs. Consult your doctor first.

Any minor injury resulting from hair removal may allow bacteria to penetrate the injury site potentially causing small scars or a change in pigmentation of the skin. The risk of infection may be minimized by thoroughly cleaning the rotating discs before and/or after each use. (See Cleaning section).

The epilator should only be used after prior consultation with your doctor if you have or experience:

- Open wounds
- Eczema, psoriasis (scaly eczema), inflamed skin reactions such as folliculitis, skin rashes or the tendency to allergy or allergic skin reactions
- Immune deficiency or disorders
- Coupe rose, rosacea, or varicose veins
- Pregnancy
- Reduced skin immunity as a result of diabetes, pregnancy, Raynaud's disease, etc.
- Haemophilia
- If you have moles, raised skin bumps, etc.

If you have been or begin taking hormone medication, or recently been pregnant, a change in your hormone levels may influence the thickness, colour or amount of hair growth. This is caused by the hormonal changes, not by this method of hair removal.

Clean the epilating head after each use following the CLEANING instructions.

Put It To The Test

Like many new products, your Epilator may take a little getting used to. If you are using a hair removal system for the first time, or if you've been using a different brand, your skin may need time to adapt to your new Epilator.

Give yourself a little time to practice and determine the best comfort settings and speed to remove hairs quickly, yet comfortably. The rotating discs grip even the shortest hairs (1/64in./0.5mm) and remove them at the root. Any regrowth of hairs tends to be softer - no more stubble! Your legs will remain smooth for weeks.

To acquaint yourself with how the Epilator works, be certain to read the instructions and important information contained in this booklet before using for the first time.

How To Use Your Epilator

Use this epilator for its intended use as described in this manual.

Make sure your skin is clean, free from grease and creams. Do not apply any cream before using. Hairs are easier to remove after a bath or a shower, but your skin should be completely dry before using your Epilator.

Epilation is easier and more comfortable when the hair has the optimum length of 1/8 - 5/32in/3-4mm.

If you are using the appliance for the first time, it is recommended that you begin at an area with little hair growth to become accustomed to using your Epilator.

As the hairs are being removed by the root, your skin may feel a little discomfort after using the Epilator for the first time. This effect will gradually lessen with each use.

After epilation, regrowth of hairs tends to be softer both in appearance and in touch.

After each use, you may want to apply a non-alcohol based mild cream or body lotion which will help reduce the possibility of skin irritation.

Before first use, clean the epilating head.

See 'Cleaning' section.

Be certain appliance is in OFF "O" position. Connect cord to appliance, making sure that the plug is completely inserted into the appliance

Switch the Epilator ON by selecting the desired speed

Epilating

For areas where the hairs are thinner, hard-to-reach places and areas with bones close to the skin's surface (such as knees and ankles), select speed I (normal speed).

For larger surfaces and thicker hair areas, select speed II (high speed)
Hold the Epilator perpendicular to your leg at a 90° degree angle with the ON/OFF Slide Switch pointing in the direction you are going to move the appliance.

Keeps the skin taut using your fingers to stretch the skin so the rotating discs can grasp the raised hairs. Gently press and move the Epilator slowly over the skin against the direction of hair growth. If you press too lightly or too hard, the Epilator will not be able to grasp and remove the hairs. Experiment until you find the right settings and right amount of pressure for your type of skin and hair.

To switch the Epilator OFF, slide the ON/OFF Switch to the "O" position.
Clean Epilator head after each use.

NOTE: If you choose to use a cream or moisturizing lotion after use, be certain it does not contain alcohol as it may cause discomfort.

IMPORTANT:

After using the Epilator, some redness or irritation may occur. This is normal and should disappear quickly. This appliance is only intended for removing hair in areas such as: underarms, parts of the face, bikini area and legs. Do not use it for any other purpose.

Clean the appliance after each use following the CLEANING instructions.

Cleaning

IMPORTANT

Always switch the Epilator to OFF position "O" and remove plug from electrical outlet and epilator before cleaning.

Never immerse this appliance in water.

Do not use strong or abrasive cleaners or acetone to clean the housing/body of Epilator.

Cleaning the Epilator Head

It is essential for hygienic reasons and optimum performance that the epilating head, attachments and rotating discs are cleaned after each use.

Never clean, remove, or replace epilating head, attachments or rotating discs while motor is ON. The rotating discs are not removable from the appliance.

Do not apply pressure or touch rotating discs with hard objects as this may damage the discs. If damage occurs, discontinue use immediately.

Remove the epilating head by pushing the white button on the side of the epilator close to the epilating head. Then pull the epilating head off the appliance at the same time.

Remove loose hairs from the epilating discs with the brush supplied.

Never try to detach the epilating discs from the appliance

Rinse the epilating head thoroughly under warm tap water.

Shake off excess water and dry epilating head completely with a soft towel.

Do not replace the epilator head onto the appliance until it is completely dry.

Place the epilating head back onto the appliance and push it against the direction of the arrows indicated on the back of the epilating head until it snaps back into position. You will hear a click.

The epilating head only fits onto the appliance in one way

Storage

Be sure Epilator is turned OFF. Remove cord from outlet and Epilator before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.

Do not wrap cord around Epilator when storing.

Store cord in a safe location where it will not be cut or damaged.

Do not place or store Epilator where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
ENJOY!!!